

DIRECTIONS

For Using

EVERSHARP

Pencils With Tight - Gripping Rifled Tips

To write: Propel lead from point by turning cap E to right, clockwise.

To repel lead: Turn cap E to left and push lead back at tip A.

Note: Eversharp is the only pencil with the push-back method of repelling lead, as it is the only pencil that grips lead with "rifles" so it cannot wobble or turn.

To release plunger: Lead is exhausted when turning cap to right fails to propel more lead. Inner mechanism has been released and can be pulled straight out at cap E.

Note: Quick release mechanism is found on all breech loading Eversharps with exception of miniature and lower priced models — these models must be unscrewed when lead is exhausted.

Extra leads: With mechanism withdrawn and held upright, unscrew cap at D four or five full turns. Leads can be procured by tipping through V shaped opening in side of magazine at C.

To re-load: Insert new lead by pushing plunger rod all the way down, while holding mechanism upright, and inserting new lead in tapered end as shown at B. Slip barrel down over mechanism and turn cap to right until lead feeds out.

Note: The distance mechanism will pull out, always indicates length of unused lead in tip.

To erase: Eraser is under cap E. To use pull cap straight off. Do not unscrew.

To renew eraser: Unscrew brass bushing D which contains eraser and punch old eraser out backwards with pencil tip.

To fill lead magazine: Unscrew eraser bushing D and insert leads into magazine.

ALWAYS USE RED TOP LEADS

to refill Eversharp. Look for Red Top metal tube. Colors: Black, red, yellow, green, blue, purple. Seven grades of hardness. Sold by your dealer.



THE WAHL CO.

1800 Roscoe St. — Chicago, Ill.

San Francisco
235 Montgomery St.

New York City
570 Seventh Ave.

Printed in U.S.A.

