

Parker

SOME USEFUL INFORMATION ON HOW TO OBTAIN THE BEST SERVICE
FROM YOUR PARKER PEN

1. If your Parker is new and the nib does not suit your hand we will exchange the nib, free of charge, within 28 days of purchase provided it is undamaged. NIB RANGE—Extra Fine, Fine, Medium, Broad, Stub, Narrow Oblique, Medium Oblique and Broad Oblique.
2. Correct filling of your Parker is most important to ensure best performance. Follow the filling instructions carefully.
3. Always use good quality ink. We recommend Parker Quink. In addition to being chemically pure, Quink contains Solv-x which helps to keep your Parker clean and trouble free. Low quality inks are harmful to pens.
4. Your Parker should be flushed out occasionally with clean cold water. This removes dust which may accumulate around the point of the nib and feed causing restriction of the ink flow.
5. The outer cap should always be replaced when your Parker is not in use. Replacing the cap prevents the ink drying on the nib point.
6. When carrying your Parker it should be kept upright in the pocket or handbag.
7. If your Parker does not appear to be working properly consult a Parker retailer. He will be only too pleased to advise you, or if your pen needs repairing, to forward it to our factory.

The Parker Pen Company Limited

BUSH HOUSE, LONDON


2788

Parker
DUOFOLD, VICTORY *and* SLIMFOLD
(Transparent Reservoir Models)


Pens and Pencils

All Parker writing equipment is sold to the public on the understanding that the Company agrees to correct, without charge, any defect in materials or workmanship that is revealed within one year of purchase


How to fill your
DUOFOLD, VICTORY or SLIMFOLD
(TRANSPARENT RESERVOIR MODEL)

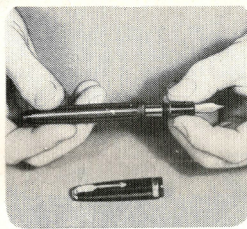

1. Unscrew cap. Remove barrel by unscrewing.

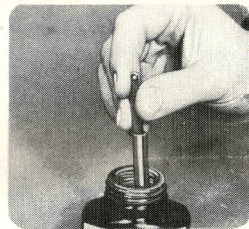


2. Immerse the nib completely in ink. Press ribbed bar firmly at least five times.

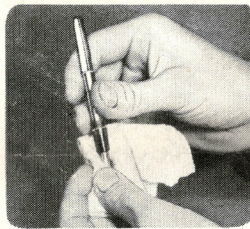


3. Wipe off surplus ink from the nib with a soft cloth.

WE RECOMMEND THAT YOU USE PARKER QUINK IN YOUR PEN

How to load your
'PARKER' PENCIL

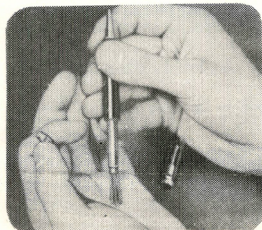


1. Spare refill leads are carried in the pencil magazine. To obtain a lead, pull off cap and remove eraser.
2. Propel mechanism by holding barrel and turning cap clockwise until all remaining lead is

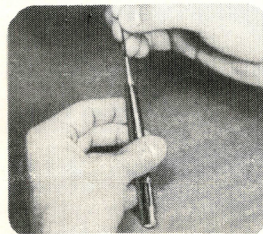

ejected. When mechanism is empty, knockout pin will show at tip. Repel mechanism by turning cap anti-clockwise until it stops (Do not strain). Insert new

USE PARKER LEADS

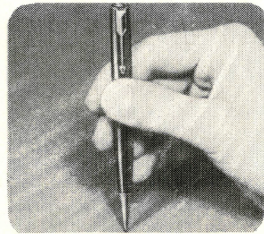

3. Propel mechanism slowly until $\frac{1}{8}$ " of lead is exposed. Press lead against firm surface to seat it in the clutch. Pencil is now ready for use.