

DIRECTIONS FOR USING THE

SWAN PEN

LEVER-FILLING TYPE

HOW TO FILL. Lift lever and immerse the nib in the ink, until well covered, then, after closing the lever, pause to allow the rubber sac to expand fully and so draw in the ink.



LEVERLESS TYPE

HOW TO FILL. Well immerse the nib in the ink and turn the knurled knob at the top of the barrel to the left as far as it will go. Then, with the nib still immersed, turn the knob back to its original position and pause a moment so that the reservoir may draw in its full amount of ink; this is important.

NOTE. When filling the pen the nib should be kept wholly immersed in the ink, otherwise bubbles are likely to form in the sac, thus preventing the pen from being totally filled. When the pen is new, fill and expel several times to moisten thoroughly the ink ducts and feeds. Should the pen require cleaning, repeat the filling operation several times, using cold water.

GENERAL INSTRUCTIONS—SEE OVERLEAF

CAUTION. Operating the filling device compresses the ink sac and expels the ink from the pen; never, therefore, do this if there is likely to be ink in the pen, unless the nib is held over an ink bottle, and never do so with the cap screwed on. Even though the pen is in disuse it should be kept filled with ink.

THE SAFETY CAP—SPECIAL INSTRUCTIONS. When the pen is not in use, it is important that the cap to protect the nib be screwed on firmly, and then another little turn given "just to make sure"; this allows the pen to be safely carried in any position without leakage.

REPAIRS. Pens for repair should be sent through your local Stationer.

IMPORTANT. To obtain best results from your pen use only SWAN INK.

BIRO SWAN LIMITED

Swan House, Whitby Avenue, Park Royal, London, N.W.10

Directions to fill—see overleaf.