

## Service Guarantee

### **DIRECTIONS FOR KEEPING YOUR "WEAREVER" PEN IN PERFECT CONDITION**

**TO FILL**—Have a clean bottle of ink. Be sure there is enough ink to completely cover the pen point up to the section. Raise lever to horizontal position. Snap lever back to its original closed position. Hold pen in ink for 15 seconds, to fill sac to maximum capacity. Withdraw pen, wipe off surplus ink, and pen is ready for use.

**TO CLEAN**—Flush your pen with ink several times. If pen has not been used for some time and the ink is dried follow the general filling instructions above **EXCEPT** to use cold water instead of ink. This should also be done when changing inks. Allow pen to dry before filling with fresh ink.

**DO'S and DON'TS for Pen Users**—Always keep your pen filled. A pen with little ink is more likely to flood or feed too freely. Always keep cap on pen when not in use. This keeps point moist with ink so that it will start to write instantly. Always keep pen upright to prevent flooding of inner cap. Use clip to hold pen in pocket, handbag or purse. Never raise the lever unless you hold pen over an ink bottle.

**DAVID KAHN, INC., North Bergen, N. J.**

*World's Largest Manufacturer of Fountain Pens*

Made in U.S.A.

Guarantee

★  
**WEAREVER**

**PENNANT  
FOUNTAIN PEN**

This Guarantee covers the replacement of any part of the pen which shows a defect in construction or material.

Any part broken by accident or ill usage will be replaced at prevailing parts prices, plus a 15c charge for handling and postage.

The Wearever Fountain Pen is a precision instrument and must never be taken apart.

Made in U.S.A.

★Reg. U. S. Pat. Off.

CHOOSE THE POINT  
THAT SUITS YOU BEST

*Extra Fine*



FOR BOOKKEEPING AND ACCOUNTING WORK

*Steno*



FOR STENOGRAPHIC NOTES

*Flexible Fine*



FOR GENERAL WRITING PURPOSES

*Medium*



FOR GENERAL WRITING PURPOSES

*Broad*



FOR THOSE WHO PREFER A BROAD STROKE